



## WALL MOUNT INSTALLATION

LAG SCREWS MUST BE INSTALLED INTO STUDS FOR SUPPORT OF THE RTW UNIT. FAILURE TO INSTALL IN STUDS COULD RESULT IN DAMAGE TO UNIT AND/OR HARM TO PERSONS OR PROPERTY. STAR IS NOT RESPONSIBLE FOR DAMAGE RELATED TO INCORRECT INSTALLATION OR FAULTY CONSTRUCTION. THESE INSTRUCTIONS REFERENCE INSTALLATION SHEET NUMBER 2M-Z21299.

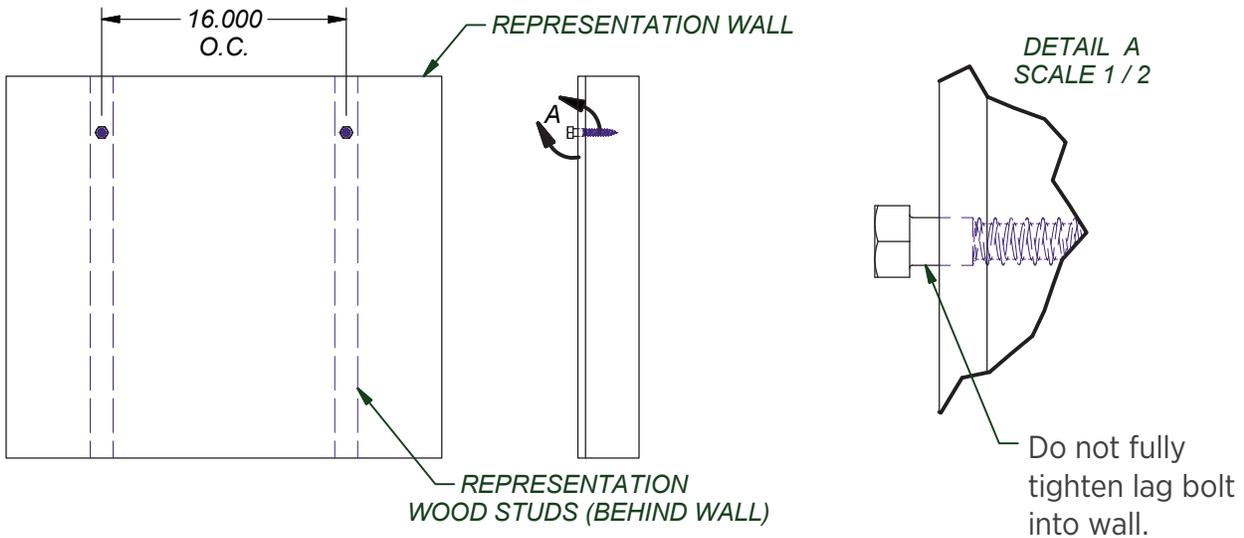


**STEP 1 - INSTALL LAG SCREWS (ITEM 1) INTO WALL  
(SEE NOTE ON PAGE \*\*\*)**

- !!!!DO NOT TIGHTEN LAG BOT FULLY INTO WALL!!!
- MARK AND LOCATE CENTER OF WALL STUDS
- STANDARD CONSTRUCTION IS 16" ON CENTER (O.C.)

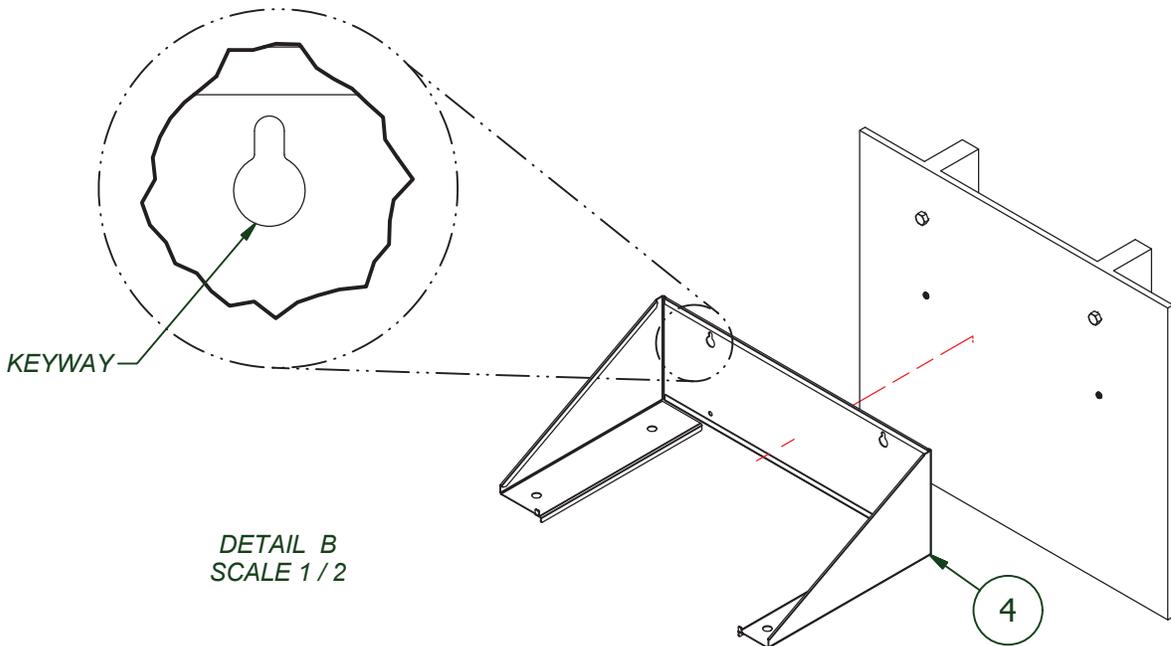


**STEP 2 - HANG RTW WALL MOUNT BRACKET (ITEM 4)  
OVER LAG BOLTS-SLIDE DOWN INTO KEYWAY**

**STEP 3 - FINISH TIGHTENING DOWN LAG BOLTS  
AND INSTALL TRUSS SCREWS (ITEM 2)  
AS SHOWN.**

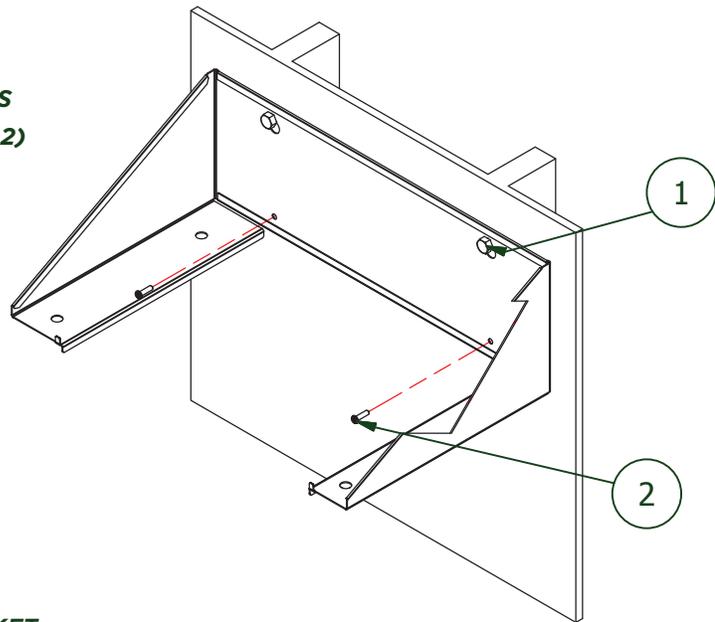

**STEP 4 - PLACE TORTILLA WARMER INTO BRACKET  
ALIGN MOUNTING HOLES ON BOTTOM OF UNIT  
WITH HOLES IN WALL MOUNT BRACKET.  
SCREW IN BUTTON SOCKET SCREW(S) (ITEM 3)  
AND TIGHTEN TO SECURE.**

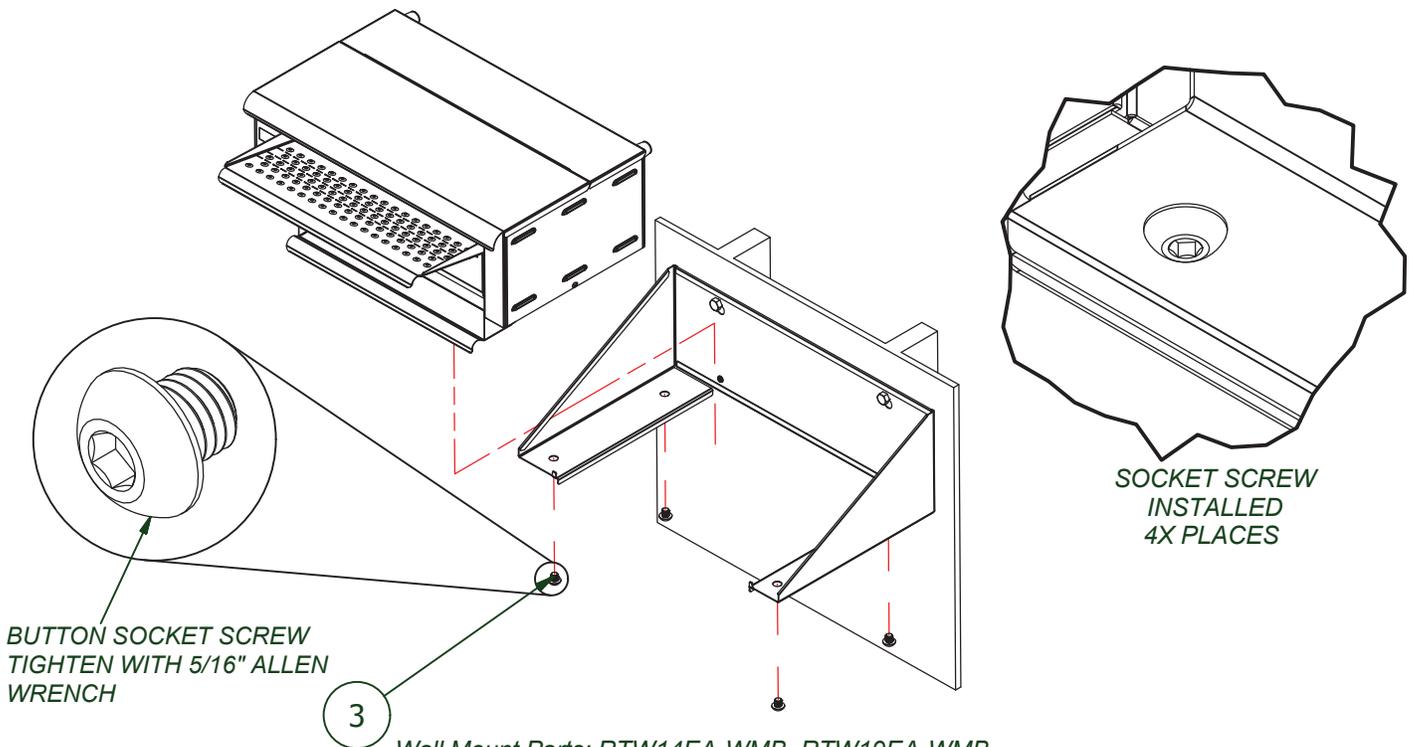

Wall Mount Parts: RTW14EA-WMB, RTW19EA-WMB

Wall Mount Parts List			
ITEM	P/N	TITLE	QTY
1	2C-Z21298	HEX LAG SCREW, 2-5/16 X 2" X 1/2" HEX SIZE	2
2	2C-Z21297	K-LATH SCREW, TRUSS, #8, 1"	2
3	2C-Z19191	BOLT 1/2-13x1/2 BHSC SS	4
4	D6-Z22669 D6-Z22668	BRACKET, WALL MOUNT, RTW19EA BRACKET, WALL MOUNT, RTW14EA	1